



## TALON CD & DVD DUPLICATOR QUICK START GUIDE

**The following is a Quick Start Guide for use of the TALON CD & DVD/CD Duplication systems. This Quick Start Guide is designed to allow the user immediate operation of the unit.**

### COPY DISC TO DISC

1. Turn on the unit.
2. Make sure it is on "1. Copy" function, if not, use the arrow keys to change.
3. Insert the master.
4. Insert the blank media to all trays.
5. The copy will start automatically once the trays are closed.

### COPY HD to DISC

1. Turn on the unit, you will see "1. Copy" at the end of the initialing process.
2. Press down arrow button until you see "12. Image Manager". Press "ENT" button.
3. Insert the master.
4. Press down arrow button until you see "2. Disc => Image". Press "ENT" button.
5. The master disc will begin to load to the hard disk.
6. Once the process is complete. Remove the Master. Press ESC.
7. Press up arrow button until the screen shows "8. Select Source". Press "ENT" button.
8. Press down arrow button until the Source option shows "HDD:." Press "ENT" button.
9. Press down arrow button to select the image you would like to copy. Press "ENT" button.
10. Press up arrow button to return to "1. Copy".
11. Insert the blank media to all trays.
12. The copy will start automatically once the trays are closed.

This system is designed with industrial power supplies and high performance recorders. If you experience any failures, please take out all of the discs, reboot the system and check your media types.

The TALON CD Duplication System is guaranteed to be free from defect in materials and workmanship for one year. TALON assumes no responsibility for the illegal distribution of audio, video, and text/graphics data. Call 1-888-832-9619 for Technical Support.



[www.talonproducts.com](http://www.talonproducts.com)